

DD Vari-Loop V3.1


IPR and © by Norbert Pieper (Biker61)
Max-Planck-Str. 11, 59399 Olfen, Germany
30-MAR-2019

Note:

The dimensioning is scaled in „d“ = 1 Rope-Diameter

The dimensioning is valid for polyester ropes.


The length of the Bury-Splice is depending on the individual friction of the rope and must be adapted to the individual type of rope!

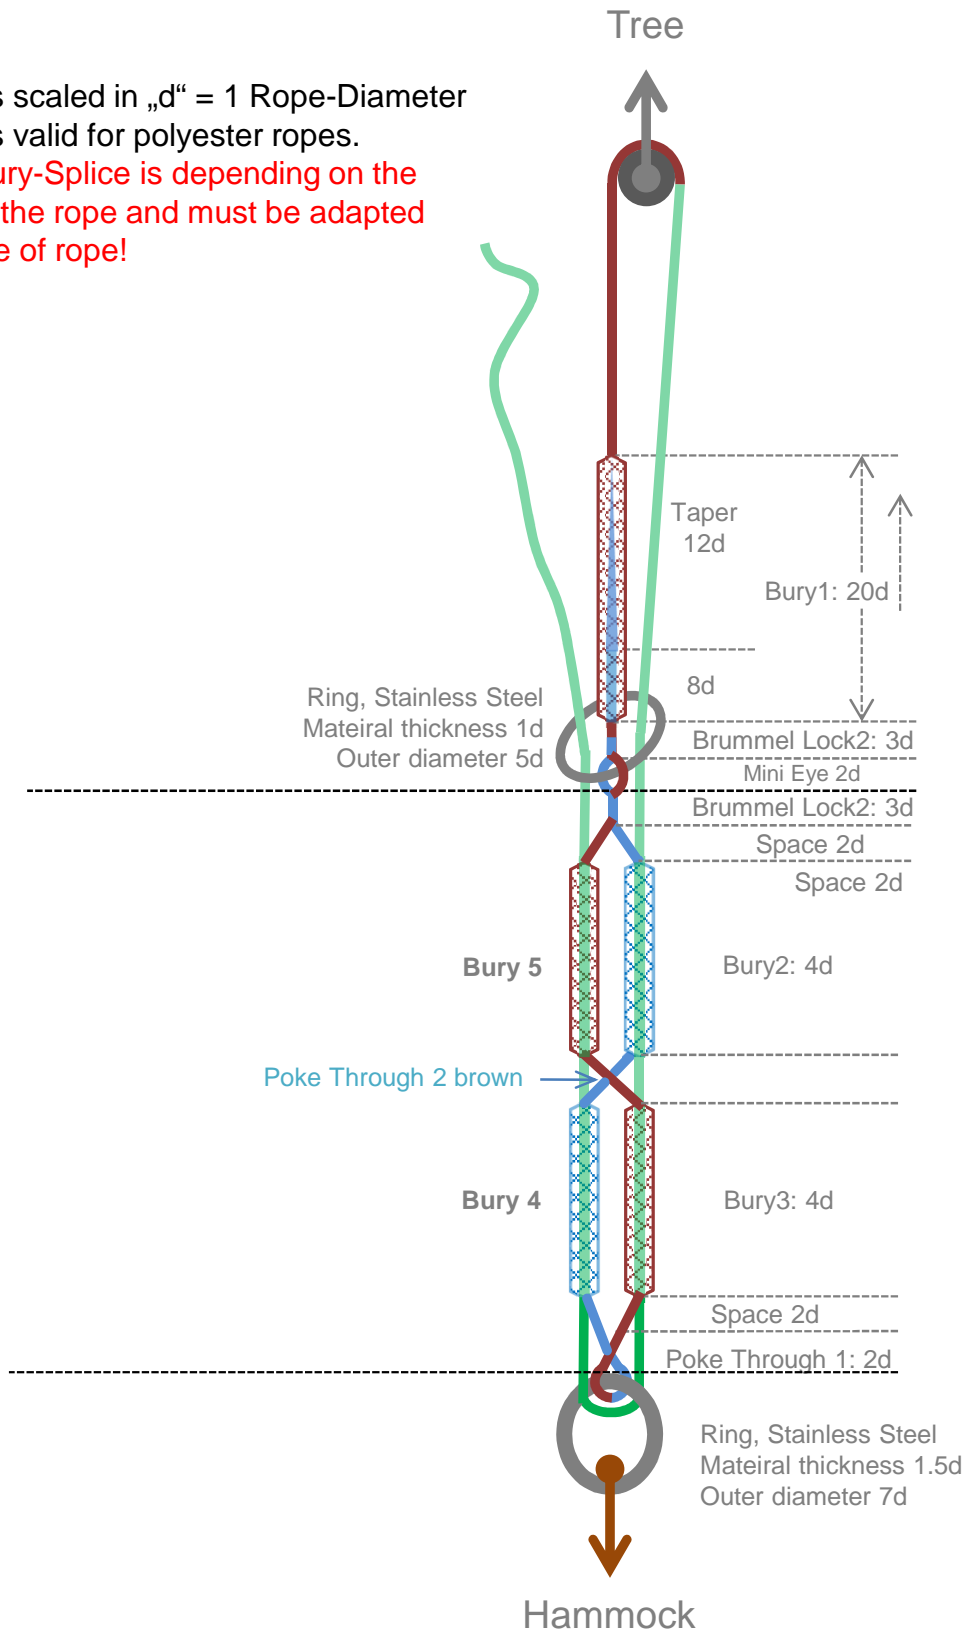

Workflow

SF= Bury Shrink Factor of your individual line

1. Get/Cut a piece of Line about 4 Meter long
2. Do **Mark1** at $56d$ from one end
3. Slide Line through Ring1
4. Do Poke Through 1
5. Stretch both strands strongly
6. Do **Mark2**: $(8d * SF + 8d)$ beyond the end of Brummel Lock1
7. Do Poke Through 2 at middle position
8. Do Brummel Lock2
9. Slide short line end (blue) through Ring2
10. Do Brummel Lock3
11. Taper the blue end over a length of $12d$
12. Do Bury1
13. Secure Bury1 with stitching
14. Stretch the system strongly
15. Do Bury 2,3
16. Go through Ring1
17. Do Bury 4,5

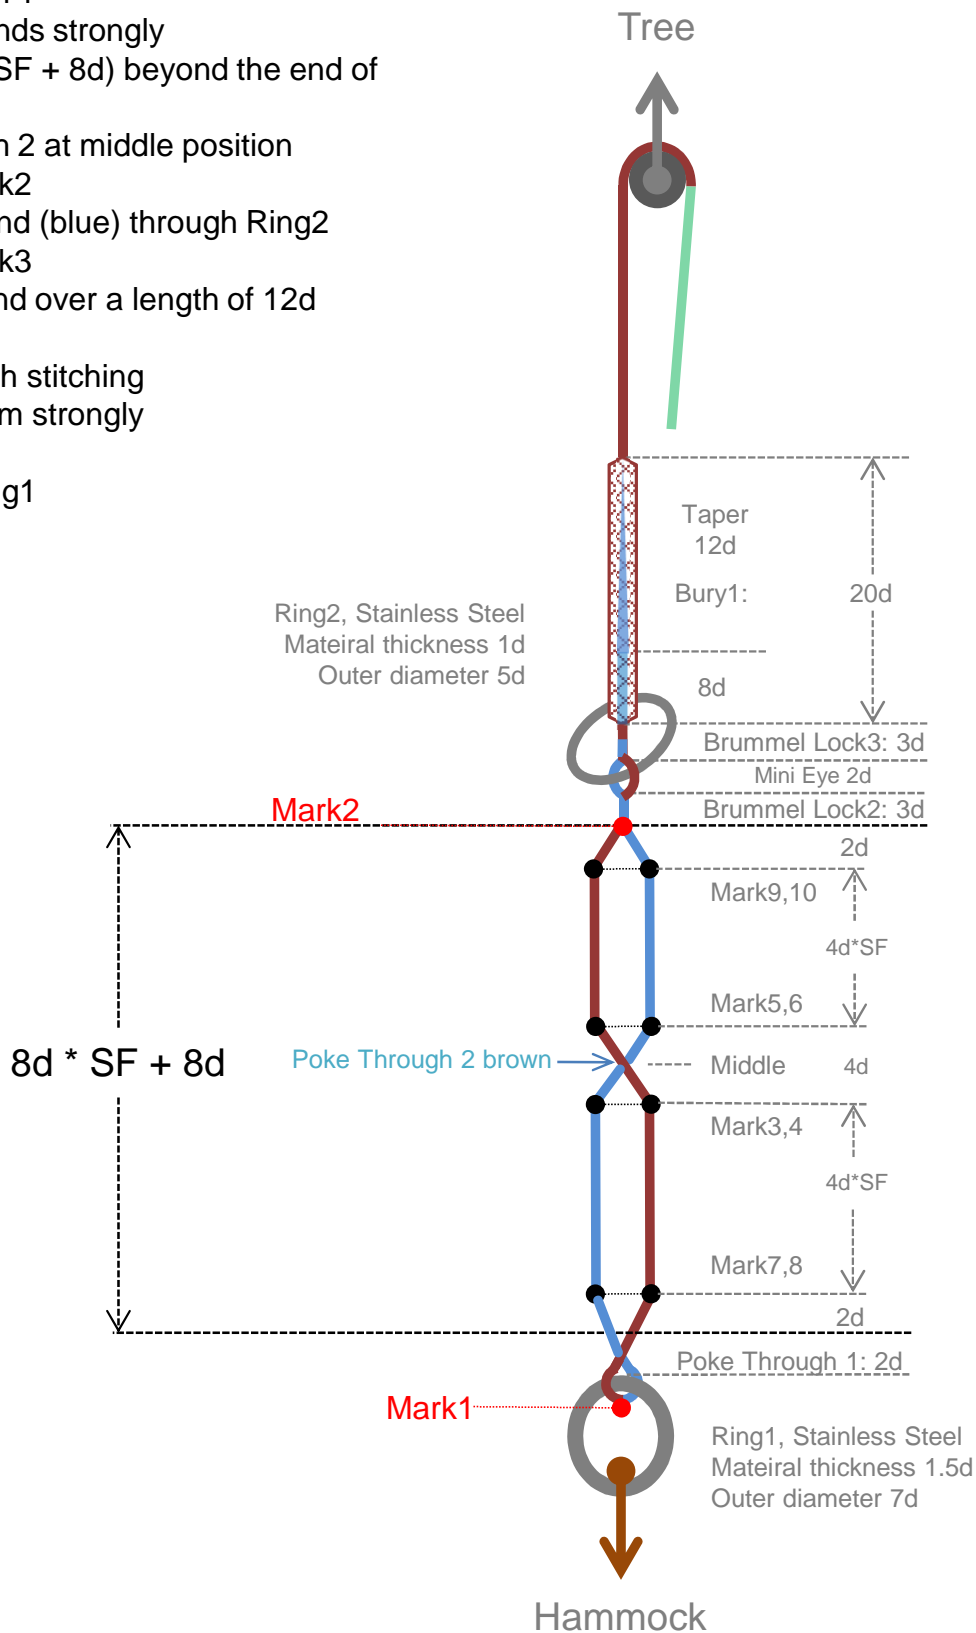



Rope Type "BARNITZ"



Detail: Release Ring

